

L	Н	Catalog No.	S
120	80	LODDO	40
140	100	LGPBS LGPB	60
160	120	LGPB	80



Catalog No.	S
LGPBS	40
LGPB	60

Catalog No.	D	
LSB	40	
Catalog No.	1	

60

LPST






Order Catalog No. L LPST 60

For Operation

- Set the lifter bar and the stopper block so that the clearance may be 0.5 mm. This eliminates adjustment of interval accuracy between each post.
- This is used at the center of the transfer die and the progressive die.
- Standard travels are 40, 60 and 80. Other travels less than 80 mm are available.
- Since the lock hole is provided, the unit can be locked at the bottom dead center.

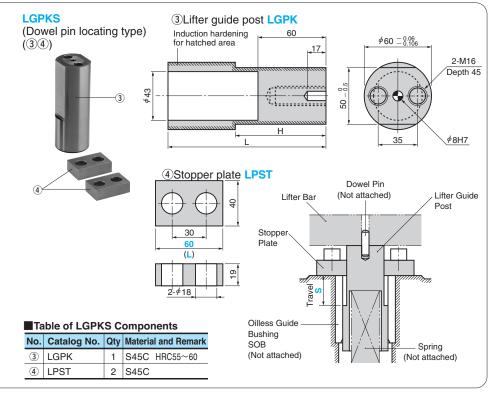

L	н	Catalog No.	s
140	80	LGPKS	40
160	100	LGPK	60



⚠ Refer to the previous page for LPST.

■For Operation

- Only adjustment of the dowel pin interval can achieve the accuracy.
- Use two lifter guide posts for one lifter bar.
- This is used for the side area in the progressive die.
- Standard travels are 40 and 60. Other travels less than 60 mm are available.

■ Recommended Oilless Guide Bushing SOB

Catalog No.	S	Applicable Bushing	
	40	SOB60-74-60	
LGPBS	60	SOB60-74-80	
	80	SOB60-74-100	

able Bushing	Catalog No.	S	Applicable Bushing
860-74-60	LGPKS	40	SOB60-74-60
860-74-80	LUPKS	60	SOB60-74-80