 


# Plunger Wrench

 
## Die Setting Components

### ● SPL/SPH SPLL/SPLH SPXL/SPXH NSPS/NSPL Plunger Wrench


#### SPWT1

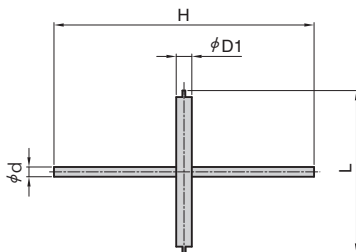

#### SPWT2

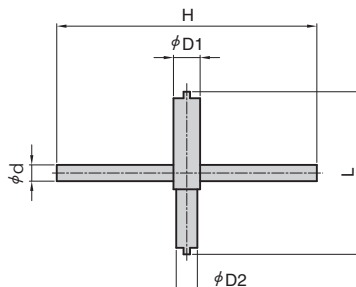

#### SPWT3 SPWT4 SPWT5

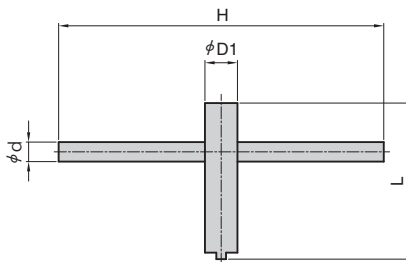 

| Catalog No. | M     | $\phi D1$ | $\phi D2$ | L  | H   | $\phi d$ |
|-------------|-------|-----------|-----------|----|-----|----------|
| SPWT1       | 5·6   | 4.8       | —         | 50 | 80  | 3        |
| SPWT2       | 8·10  | 8.2       | 6.5       | 50 | 80  | 5        |
| SPWT3       | 12    | 10.0      | —         | 50 | 100 | 6        |
| SPWT4       | 16    | 13.7      | —         | 60 | 100 | 9        |
| SPWT5       | 20·24 | 20.6      | —         | 70 | 100 | 10       |



Catalog No.

SPWT3

### ■ For Operation

Please use a flat-head screwdriver for the M4 spring plunger.