



Pusher

Square Guide Type

Panel Transfer Components

APEHB (With Bracket)

APEH (Without Bracket)

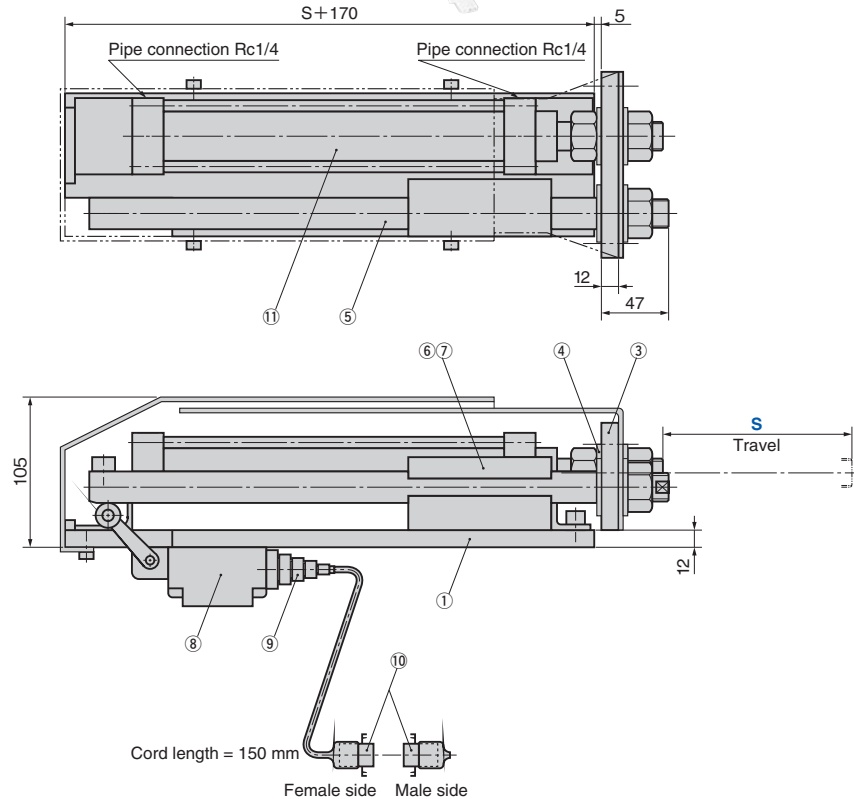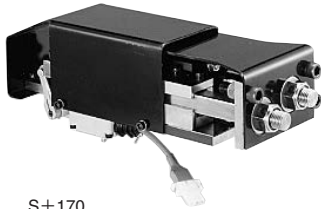


● Bracket

Catalog No.	Travel S
	150
	200
	250
APEHB	300
APEH	350
	400
	500



Catalog No.
KSCH



Catalog No.	S
APEHB	250
APEH	300
KSCH	

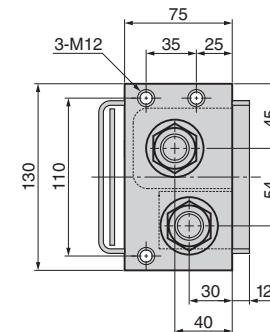

KSCH (Bracket)

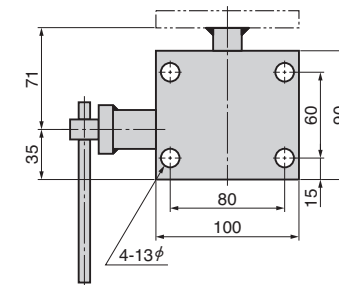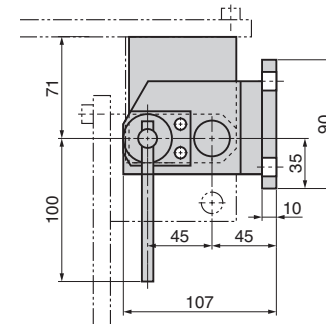

No.	Description	Qty	Material and Remark
1	Base plate	1	Steel
2	Bracket	1	Steel
3	Connector Plate Mounting Board	1	Steel
4	Collar	1	Steel
5	Guide Pin	1	Steel
6	Guide Holder (upper)	1	SO#50SP2
7	Guide Holder (lower)	1	SO#50SP2
8	Limit Switch	1	Yamatake
9	CAPCON (cable clamp)	1	Ohm Electric
10	Nylon Connector Set	1	—
11	Air Cylinder	1	SMC (φ40)

Precautions for Use



- When the bracket is used, the pusher can be folded for storage.
- Since the guide pin is square shaped, it does not turn.
- Type with or without bracket can be selected.
- When the unit is assembled to the die, weld the bracket to the desired position of the base plate.

Refer to page 343, 344 for the pusher spring head and the connector plate.

Pusher Spring Head

Panel Transfer Components

PSH

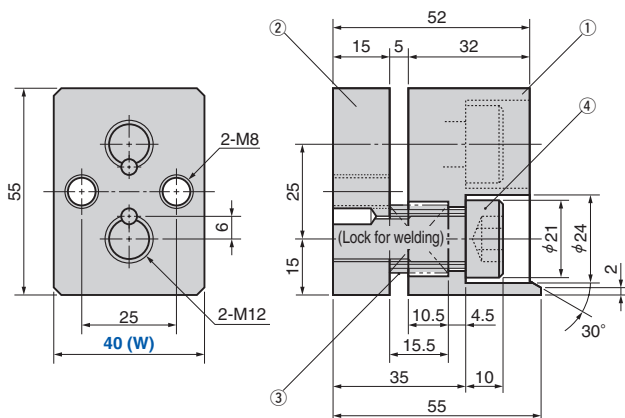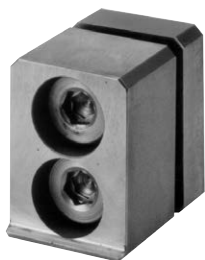

No.	Description	Qty	Material and Remark
1	Pusher Plate	1	Steel
2	Connector Plate	1	Steel
3	Spring	2	—
4	Hanger Bolt	2	—

Catalog No.	W	Load [N (kgf)]	
		Min	Max
PSH	40	37.8 (3.9)	79.8 (8.1)




Catalog No.

PSH

W

40

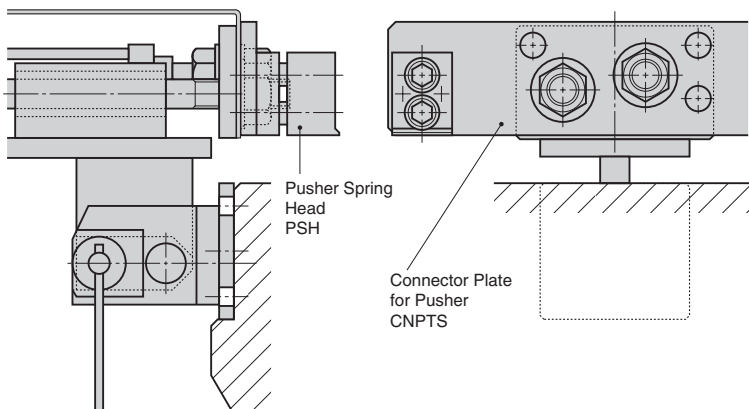

Connector Plate


For Pusher Spring Head Mounting

Panel Transfer Components




CNPTS (For APEH, P.341)

**CAD
FILE**

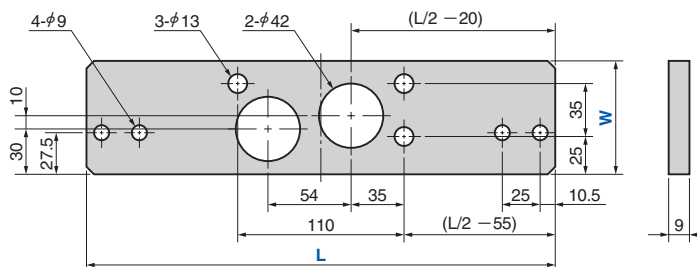

CNPT (For SOAP, P.335)

**CAD
FILE**

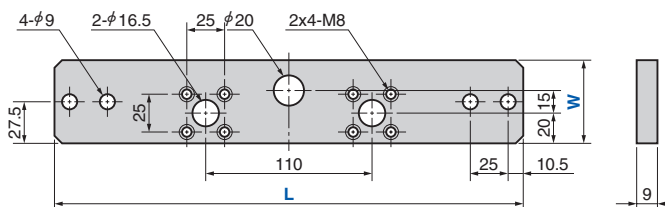

〈Material〉 SS400

Catalog No.	W	L 1 mm increments
CNPTS	75	220~250
		251~300
		301~350
		351~400
		401~450
		451~500
		501~550
		551~600

Catalog No.	W	L 1 mm increments
CNPT	55	250~300
		301~350
		351~400
		401~450
		451~500
		501~550
		551~600



Catalog No. W L
CNPT 55 255

Panel Transfer
Components