SKCA [Overview]

Product Information

- Mount face widths 52, 65, 100, 150, 200, 250, and 300 mm.
- •Working angles from 0° to 20° in 5° increments for 65, 100, and 150 mm.
- Mount face widths of 52, 200, 250, and 300 mm are available with an angle of 0°.
- •Gas Spring is available in 65, 100, 150, and 200 mm width and 0°.
- The Box-type holder provides high rigidity.



■Gas Spring Specifications

Moun	t Face		Working Forc		ce [kN (tonf)]	
w	Н	Working Angle	Travel	Standard Working Force 1,000,000 strokes	Allowable Working Force 300,000 strokes	Spring Force N (kgf)
65	70	00	38	19.6 (2.0)	39.2 (4.0)	667 (69.1)
100	100	00	40	29.4 (3.0)	58.8 (6.0)	1111 (113.4)
150	100	00	40	58.8 (6.0)	88.2 (9.0)	2051 (209.3)
200	110	00	40	78.4 (8.0)	117.6 (12.0)	2733 (278.9)

■Coil Spring Specifications


Mount Face				Working Force [kN (tonf)]		
w	н	Working Angle	Travel	Standard Working Force 1,000,000 strokes	Allowable Working Force 300,000 strokes	
			25			
52	65	00	40	14.7 (1.5)	29.4 (3.0)	
			60			
		00	40			
		00	60			
		05	45			
		05	70			
65	70	10	45	19.6 (2.0)	39.2 (4.0)	
03	70	10	70	19.0 (2.0)	39.2 (4.0)	
		15	45			
		15	70			
		20	45			
		20	70			
			40			
	100	00	60	29.4 (3.0)	58.8 (6.0)	
			80			
		05	45			
		05	70			
100	90	10	45			
			70	39.2 (4.0)	78.4 (8.0)	
	30	15	45	39.2 (4.0)	70.4 (0.0)	
		15	70			
		20	45			
		20	70			
		00	40	58.8 (6.0)	88.2 (9.0)	
		00	60	30.0 (0.0)	00.2 (9.0)	
		05	45			
		05	70			
150	100	10	45			
130	100	10	70	64.7 (6.6)	98.0 (10.0)	
	15	15	45	04.7 (0.0)	30.0 (10.0)	
		10	70			
		20	45			
		20	70			
200 11	110	00	40	78.4 (8.0)	117.6 (12.0)	
200	110		60	70.1 (0.0)	117.0 (12.0)	
250	250 00	40	98.0 (10.0)	147.0 (15.0)		
200	130		60	30.0 (10.0)	147.0 (15.0)	
300		00	40	117.6 (12.0)	176.4 (18.0)	
			60	(12.0)	.70.1 (10.0)	

SKCA


SKCA [Overview]

Product Information

■SKCA52, 65 Assembly Instructions

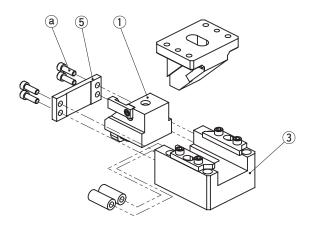


■SKCA100, 150 Assembly Instructions

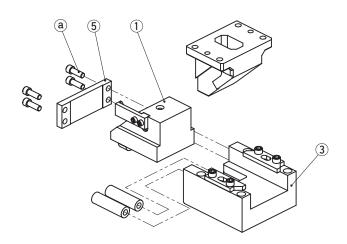


Copyright © Sankyo Oilless Industry, Inc. All Rights Reserved.

- 1) Remove Hexagon Socket Head Bolts (a), to pull out Stopper Plate (5).
- 2) Pull out and remove Cam Slider (1) from Cam Holder (3) to the rear.

■SKCA200, 250 Assembly Instructions

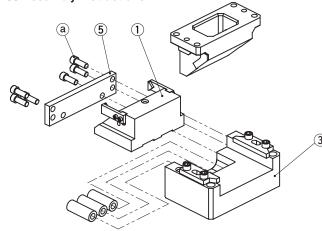

■SKCA300 Assembly Instructions

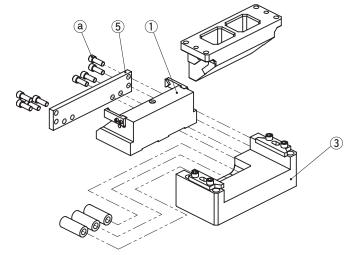

Assembly

Assembly is the reverse procedure of disassembly.

- · Ensure that all parts are clean, particularly the sliding components to which a small amount of lubricant is applied and is then placed in position.
- · Take care that the respective tolerances are observed when assembling Cam Slider and Cam Holder, which also should be identified by the same serial number.
- · Make sure that all bolts are tighten to the recommended torque after assembly and disassembly.




956

SKCA [Overview]

Product Information

■SKCA65, 100, 150 Assembly Instructions (Gas Spring)

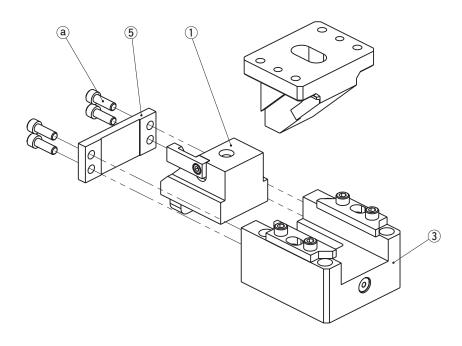

Disassembly

- 1) Remove Hexagon Socket Head Bolts (a), to pull out Stopper Plate (5).
- 2) Pull out and remove Cam Slider (1) from Cam Holder (3) to the rear.


Assembly

Assembly is the reverse procedure of disassembly.

- Ensure that all parts are clean, particularly the sliding components to which a small amount of lubricant is applied and is then placed in position.
- Take care that the respective tolerances are observed when assembling Cam Slider and Cam Holder, which also should be identified by the same serial number.
- · Make sure that all bolts are tighten to the recommended torque after assembly and disassembly.

Please contact your local sales representative if you prefer to use a gas spring not specified in our catalog. For use and maintenance of gas spring, please contact the manufacturer directly.

■SKCA200 Assembly Instructions (Gas Spring)

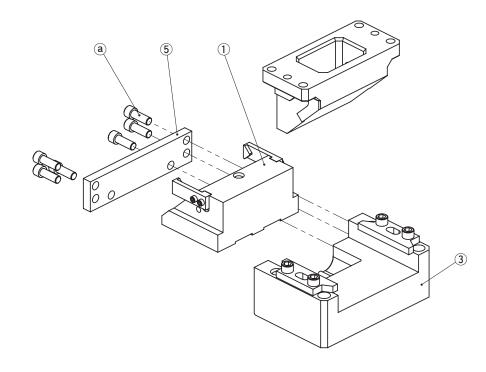

Disassembly

- 1) Remove Hexagon Socket Head Bolts (a), to pull out Stopper Plate (5).
- 2) Pull out and remove Cam Slider (1) from Cam Holder (3) to the rear.

Assembly


Assembly is the reverse procedure of disassembly.


- Ensure that all parts are clean, particularly the sliding components to which a small amount of lubricant is applied and is then placed in position.
- Take care that the respective tolerances are observed when assembling Cam Slider and Cam Holder, which also should be identified by the same serial number.
- · Make sure that all bolts are tighten to the recommended torque after assembly and disassembly.


Please contact your local sales representative if you prefer to use a gas spring not specified in our catalog. For use and maintenance of gas spring, please contact the manufacturer directly.

SKCA

958

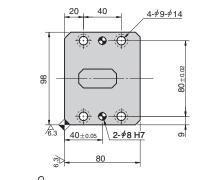

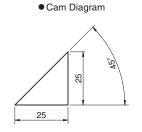


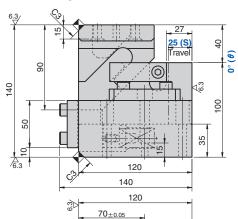

(Q)

Clearance 1

98

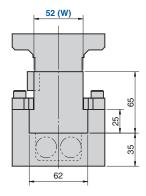

Working Force [kN (tonf)]		Spring Force		Total				
Standard Working Force	Allowable	N (kgf)		Weight	Catalog No.	W	θ	Travel S
Working Force 1,000,000 strokes	Working Force 300,000 strokes	Initial Load	Final Load	kg				
14.7	29.4	144.3	595.3	8.0	SKCA	52	00	25
(1.5)	(3.0)	(14.7)	(60.7)	0.0	SKCA	52	00	23







Refer to page 377 for the machining details of tapped holes and dowel holes for retainer

■Spring Diagram

- · Spring Model TF20-70 (2 pieces)
- · Spring constant 9.02 N/mm (0.92 kgf/mm)
- · Life expectancy of Coil Spring is approximately 300,000 strokes.

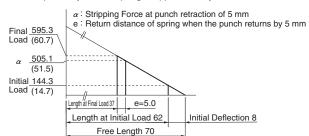

■Rear Removal Space

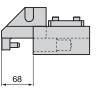



960

4-*\$*9-*\$*14


√2-∮8 H7




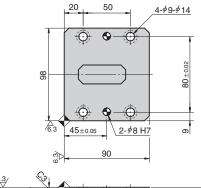


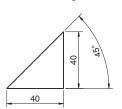

Cam Diagram

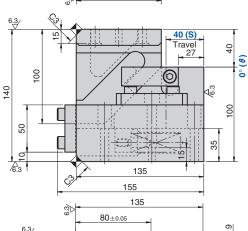

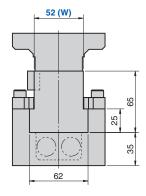

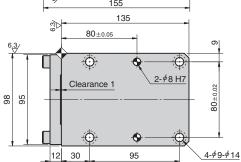

	40	45°
40		

14. <i>7</i> (1.5)	(3.0)					8.0	SKCA
Order	Catalog No.	W - 52 -	θ – s 00 – 40				

101.0

Spring Force

N (kgf)

605.8



Refer to page 377 for the machining details of tapped holes and dowel holes for retainer

Total

Weight Catalog No.

■Spring Diagram

Working Force [kN (tonf)]

Allowable


29.4

Working Force 1,000,000 strokes 300,000 strokes Initial Load Final Load

Standard

14.7

- Spring Model TF20-100 (2 pieces)
- · Spring constant 6.31 N/mm (0.64 kgf/mm)
- · Life expectancy of Coil Spring is approximately 300,000 strokes.

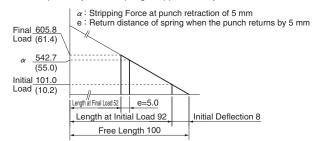

■Rear Removal Space

W


52

θ

00

Travel

40

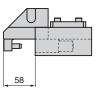



962


Standard Cam Units

SKCA


Die Mounted Cam Unit

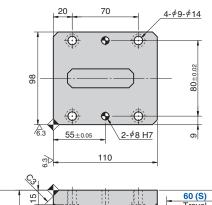

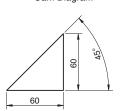

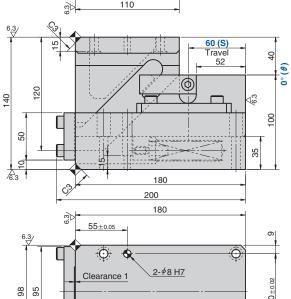

140

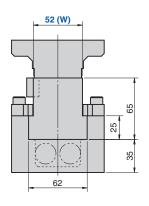

Standard	ce [kN (tonf)] Allowable	opinig i oroo		Total Weight	Catalog No.	w	θ	Travel S
Working Force 1,000,000 strokes	Working Force 300,000 strokes	Initial Load	Final Load	kg				3
14.7	29.4	109.5	614.7	14.0	SKCA	52	00	60
(1.5)	(3.0)	(11.2)	(62.8)	14.0	SKCA	52	00	00




Catalog No.	W	-	θ	-	S
SKCA	52	_	00	_	60




Refer to page 377 for the machining details of tapped holes and dowel holes for retainer mounting.

■Spring Diagram

- · Spring Model TF20-150 (2 pieces)
- · Spring constant 4.21 N/mm (0.43 kgf/mm)
- · Life expectancy of Coil Spring is approximately 300,000 strokes.

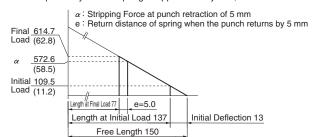

■Rear Removal Space

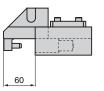

SKCA 52

963


12 30

4-\psi 9-\psi 14

SKCA [Table of Components]

Die Mounted Cam Unit

SKCA52

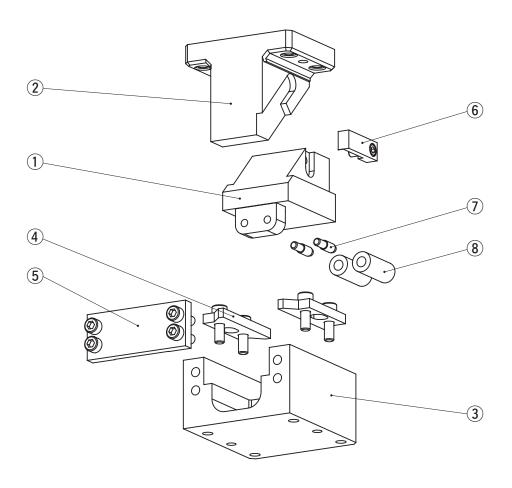

No.	Description Qty		Material and Remark
1	Cam Slider	1	Cast Iron with Graphite
2	Cam Driver	1	Cast Iron with Graphite
3	Cam Holder	1	Cast Iron
4	Upper Plate	2	Copper Powder Sintered
5	Stopper Plate	1	Steel
6	Positive Return Follower	1	Steel
7	Spring Guide Pin	2	∮10x35
8	Coil Spring	2	TF20-70 25st
8	Coil Spring	2	TF20-100 40st
8	Coil Spring	2	TF20-150 60st

Bolts, nuts, dowels, and washers for assembly are not indicated.

Cam Units [Overview]

Additional Machining

Information

■Tapped Hole and Dowel Hole (Prepared Hole, Finish) Machining for Retainer Mounting

Instruction method for machining

Indicate the tapped hole diameter and the dowel hole (or prepared hole) diameter with the XY coordinates.


To indicate the coordinates


- The origin is positioned at the upper left corner of the mount face. (However, machining uses our machining datum as the reference.)
- · Indication symbol
- -M ··· Tapped hole, -N ··· Dowel prepared hole, -K ··· Dowel finish hole

Machining standard


- · Tapped holes and dowel prepared holes are machined to general tolerances.
- The hole depth is 2.5 times the diameter for both tapped holes and dowel holes. The dowel pilot hole is processed for 2 times the diameter.
- \cdot The dowel hole spacing is machined to the tolerance of ± 0.02 . The hole tolerance is H7.


(Example of Aerial Cam Unit)

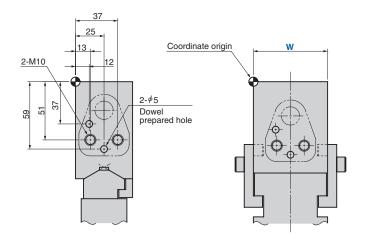

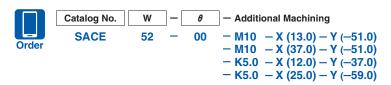

⟨Example of Die Mounted Cam Unit⟩

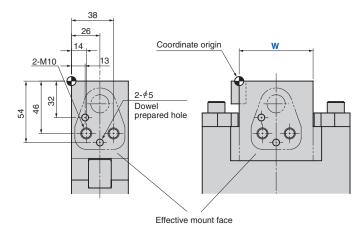

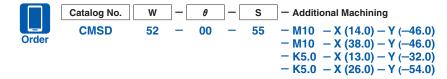

■Other machining

Please give instructions on a separate drawing for drilling or cutting other than tapped holes and dowel holes.